Technika

EXCLUSIVELY FROM TESCO

User Guide

MP229B/229P MP3 Players

mp 109 Final.indd 1 1/9/2009 4:15:04 PM

Please follow all these guidelines to safely operate your player.

- Read these instructions before using the player
- Keep these instructions. If you are transferring this product to a third party include these instructions.
- Do not use earphones while driving, cycling or walking near traffic.
- Do not listen at extremely high volumes – doing so can damage your hearing.
- To avoid damaging the player, always insert the earphones prior to switching the player on.
- Do not use or store the player in excessively dry, dusty or dirty environments.
- This product must not be exposed to dripping and splashing water or other liquids.
- Keep the player away from heat, humidity, and magnetic fields.
- Do not leave the unit exposed to direct sunlight for long periods of time
- Clean the player with a soft cloth dampened slightly with clean water. Never clean the player with solvents or abrasives.
- Never disconnect the player from the PC without following the correct procedure.
- After use always disconnect the earphones and store the earphones and the player safely.

WARNING: This product contains an integral Polymer Li-ion battery. There is a risk of fire and burns if the player is handled improperly. Do not disassemble, crush, puncture, or dispose of in fire or water. Do not attempt to open the player case or service the battery pack. Use a qualified service technician to replace the battery and replace only with a battery designated for this product. Dispose of the product with the battery intact in accordance with recycling regulations in your area.

WARNING: In the unlikely event of the player "freezing" it will be necessary to perform a reset procedure. Refer to Page 3.

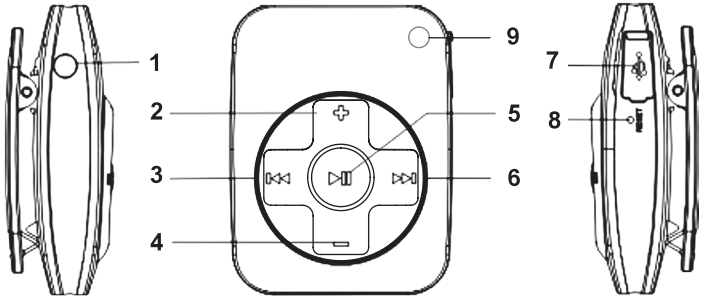

RESETTING THE PLAYER

If the player "freezes":

1. If necessary, disconnect the player from the PC (Refer to Page 5).
2. Locate the **RESET** hole (8)
3. Insert the end of a paperclip into the hole and press gently.
4. The player will now work normally.

1. 3.5mm Earphone Jack
2. [+] Press to increase Volume; Press and hold to switch between sound EQ modes.
3. [⏮] Press repeatedly to move back through the tracks. Press and hold to fast rewind the current track.
4. [–] Press to decrease Volume; **Press and hold to Lock/Unlock the player.**
5. [⏯]Press to play or pause the player; Press and hold to switch the player On/Off.
6. [⏭] Press to move to the next track; Press and hold to fast forward through the track.
7. Mini-USB connector.
8. RESET hole. (If the player freezes or operates erratically, perform the RESET procedure).
9. Indicator light.

Before using the player you should charge the battery.
Win 98/Me/2000/XP/Vista – The system will auto-recognise the player. No drivers are required.
Make sure the player is switched off.
Connect the supplied USB cable to the player. Plug the cable into a free USB port on the PC.
The battery of the player is 80% charged in about three hours and fully charged in about five hours.
During charging, the indicator flashes slowly. When the player is fully charged, the indicator will illuminate permanently. While the player is charging you can upload music.
Navigate to "My Computer". The player will appear as a " TECHNIKA".
Locate the Music (MP3) files on your PC and drag them onto the player icon to upload.

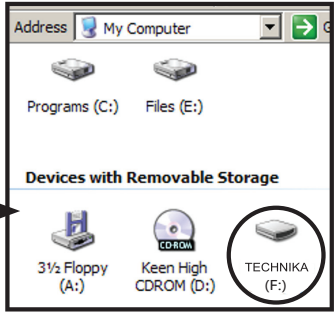

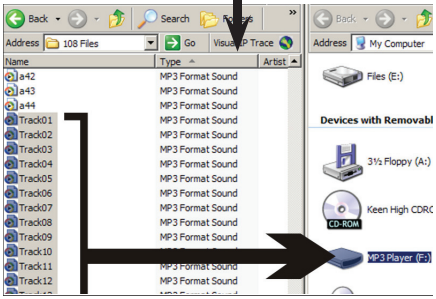

Note: If your files are stored in folders you can copy the folder onto the player icon. Ensure that only MP3 music files are in the folders before transferring them.

Hint: To make it easy to identify the player you can rename the disk, say to "MP3 Player". The PC will recognize the player by its new name whenever you connect it.

DO NOT operate the player when you are transferring files. If you switch the player on while it is connected to the PC, the PC will cease to recognise the player.

DISCONNECTING THE PLAYER FROM THE PC

1. Locate the "Safely Remove Hardware" icon on the taskbar.
2: Click this icon. Click on "safely remove USB Mass Storage"
3. Disconnect the player when you see this message.

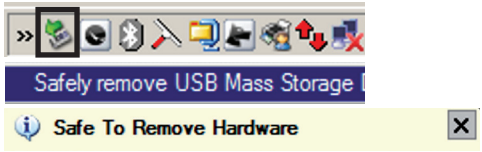

The light on the player will extinguish as soon as you disconnect the player. You may now unplug the USB cable from the player.

OPERATING THE PLAYER

SWITCHING ON AND OFF

Plug the earphones into the earphone socket before you switch on.

To switch the player on: Press and hold the ►II key for 3 seconds. In normal use the player will resume play from the point at which it was last switched off. The player will now play all the tracks continuously until switched off or the battery runs out.
During play the indicator flashes on and off every 4 seconds as a visual indicator that it is switched on.

To switch the player off: Press and hold the ►II key.
The indicator will flash once and the player will switch off.
After use always disconnect the earphones and store the earphones and the player safely.

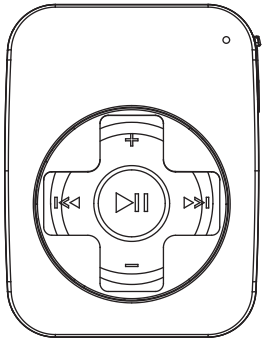

ADJUSTING THE VOLUME AND SOUND EQ

Press the + key in a series of short presses to increase the volume.
Press the – key in a series of short presses to decrease the volume.

To change the sound EQ: Press + key to scroll the EQ effects - Normal, Jazz, Rock, Classic, Pop and Bass.

When you get to the desired sound effect release the key.

NAVIGATING TRACKS

To advance a track: Press the ►►I key briefly
To move to the previous track: Press the I◄◄ key briefly twice. Each further press takes you back a track at a time.

To forward search through the tracks: Press and hold the ►►I key. Release to resume normal play.

To reverse search the current track: Press and hold the I◄◄ key. Release to resume normal play. (You cannot reverse search beyond the current track).

During forward and reverse search the sound will mute.

PAUSE

Press the ►II key. The player will pause.
Press the ►II key again to resume play.

LOCKING THE PLAYER KEYS

You can disable the player keys to prevent accidental operation.

To lock the player: Press and hold the – key for 3 seconds.

To unlock the player: Press and hold the – key for 3 seconds.

In lock mode you cannot operate the player or switch it off. Normal play is unaffected.

USING THE PLAYER WHEN CONNECTED TO A PC

1. Connect the player to the PC following the procedure on Page 4.
2. Press and hold the ►II key for 3 seconds.
3. The disk drive will now be disconnected and you can use the player.
4. Follow the disconnection procedure on Page 5 to disconnect.

TROUBLESHOOTING

If you have problems in operating your player, please check these points before returning it to Tesco.

No Power

- The battery may be exhausted. Please recharge the battery.

Files cannot be downloaded

- Check the connection between the player and PC.
- Have you switched the player on while it is connected to the PC?

No sound from the earphone

- Check the earphones and the connection.
- Increase the volume
- Check if the format of the music file is supported by the player.

The player keys do not work

- The keys are locked. Press and hold the [-] key to remove the lock.

If none of the above measures work: Reset the player (see Page 3).

WARRANTY

Your Technika appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the TESCO electrical help line on 0845 456 6767. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights.

SPECIFICATIONS

MP3 bit rate	8~320Kbps
Music formats	MP3, WMA,WAV
Frequency response	20Hz~20kHz
S/N Ratio	>80dB(30K filter)
Distortion	<0.2%
Output power	5mW/channel
Dimensions	45 x 34.4 x 16.8mm
Weight	25g.
Internal battery	polymer Lithium-Ion
Working environment	Humidity <85%, -10°~40°
Supported OS	Windows 98/Me/2000/XP/Vista
Internal memory	Model dependent

CE

UK: Waste electrical products/batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities see www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products/batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Technika

Tesco Stores Ltd, Delamare Road, Cheshunt, Herts, EN8 9SL

mp 109 Final.indd 8 1/9/2009 4:15:05 PM